





# Mini IP KVM User Manual

Desktop Remote Server Management at Anywhere

- ★ Mini Size
- ★ Variety of Video Port Selection
- ★ 1-port, 2-port, 4-port IP KVM Gateway
- ★ User Friendly IP Remote Access
- ★ OS Support : Mac / Windows / Linux

#### **Legal Information**

First English printing, June 2024

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

#### **Safety Instructions**

# Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

#### What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:

Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or
failure to follow instructions supplied with the product. Repair or attempted repair by anyone not authorized by us.
Any damage of the product due to shipment.
Removal or installation of the product.
Causes external to the product, such as electric power fluctuation or failure.
Use of supplies or parts not meeting our specifications.
Normal wear and tear.

■ Removal, installation, and set-up service charges.

#### Regulatory Notices Federal Communications Commission (FCC)

Any other causes which does not relate to a product defect.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in business, industrial and commercial environments.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

# **Contents**

< Part 1 >	IP Setting	P.3
< Part 2 >	Model coverage and package content	P.6
< Part 3 >	USB-C IP KVM	P.7
3.1	Specification	
3.2	Design Overview	
3.3	I/O & Connection	
< Part 4 >	HDMI IP KVM	P.9
4.1	Specification	
4.2	Design Overview	
4.3	I/O & Connection	
< Part 5 >	VGA IP KVM	P.11
5.1	Specification	
5.2	•	
5.3	I/O & Connection	
< Part 6 >	DVI-D IP KVM	P.13
6.1	Specification	
6.2	Design Overview	
6.3	I/O & Connection	

# < Part 1 > IP Setup



Please make sure to follow the below steps to setup your KVM IP properly.


#### I. Configure the target server

The target server is the server that connected to the IP KVM Switch. Before use IP remote access, you need to turn off mouse acceleration of all target servers. Please refer to below for Windows operating system.

#### Mouse setting


From the Control Panel, double-click the Mouse icon to open the Mouse Properties dialog box.

- Move the pointer speed slider to the default of 50%.
  ( the middle of the slider or the sixth tick from the left ).
- 2. Uncheck "Enhance pointer precision".
- 3. Uncheck "Automatically move pointer to the default button in a dialog box" & "Display pointer trails".
- 4. Windows enables mouse acceleration by default. Make sure you are logged in to windows to check mouse synchronization.
- 5. Mouse acceleration can only be turned off on a per Windows user basis. If you log in to Windows with a different user name, then you will have to configure mouse properties separately for that user as well.

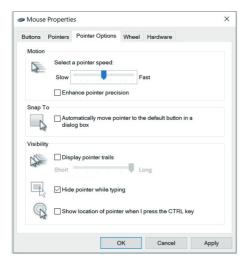

#### Change display scaling setting 100%

- 1. Open Settings.
- 2. Click on System.
- 3. Click on Display.
- 4. Under the "Scale and layout" section, select the scale 100%.

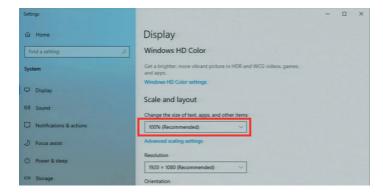

# II. Logging in to IP KVM

The default IP address is as below:

IP address: 192.168.1.22 Subnet mask: 255.255.255.0 Gateway: 192.168.1.1

IP KVM model with single IP port:

IP KVM model with dual IP ports:

- Default address 192.168.1.22

- The 1st IP address 192.168.1.22


- The 2nd IP address 192.168.1.23

To log in to the IP KVM do as follows:

1. Open the browser on the client, in the address bar, enter the default IP KVM address ( 192.168.1.22 )



- 2. In login dialog box, enter the user name and password, then click **Login**, the default user name is **super** and the default password is **pass**.
- 3. The IP KVM GUI is displayed, and the navigation bar is on left-side.

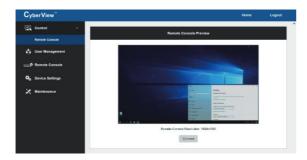

#### **III. Configure Remote Console Resolution**

The IP remote console displayed on the HTML5-based browser support multiple types of resolution, with a maximum of 1,920 x 1,200.


Click **Remote Console** and then **Resolution**, the Remote Console Video page is displayed, select the same resolution as target servers, click **Apply** to save the resolution.



#### IV. Launch remote console

Click **Control** and then **Remote console**, the Remote console Preview is displayed, then Click **Connect**, the remote console opens in a separate windows.

When first start, the local mouse is not synchronized with the remote mouse, it appears at a distance to each other, press the **Mouse Sync** once (positioning top left corner), the mouse will align.

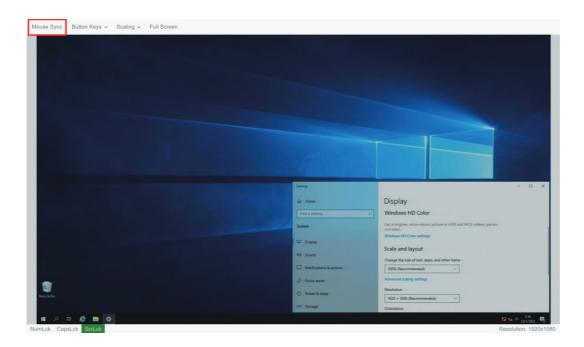

# For 4-port & 2-port Mini IP KVM models

Hotkey	Function
Scroll Lock + Scroll Lock +	Switch to previous port
Scroll Lock + Scroll Lock +	Switch to next port
Scroll Lock + Scroll Lock + Port no.	Switch to specific port
Scroll Lock + Scroll Lock + S	Auto scan for powered on PC
Scroll Lock + Scroll Lock + B	Enable / Disable beeper sound
Scroll Lock + Scroll Lock + G	Enable USB Legacy mode
Scroll Lock + Scroll Lock + K	Disable USB Legacy mode

#### Remarks:

- Example of "Scroll Lock + Scroll Lock + Port no."
  - Port No.: 1 to 4
  - e.g. Port 4 : Scroll Lock + Scroll Lock + 4
- You must press the hotkey within 2 seconds
- A beep sound will be heard for successful entering

## For 1-port Mini IP KVM models

Hotkey	Function
Scroll Lock + Scroll Lock + B	Enable / Disable beeper sound
Scroll Lock + Scroll Lock + G	Enable USB Legacy mode
Scroll Lock + Scroll Lock + K	Disable USB Legacy mode

# < Part 2 > Model coverage and package content

## **Model Coverage**



# USB-C

- 1-port ( IP-C101 )
- 2-port (IP-C102)
- 4-port (IP-C104)



# VGA E

- 1-port ( IP-S101 )
- 2-port (IP-S102)
- 4-port (IP-S104)





- 1-port ( IP-H101 )
- 2-port (IP-H102)
- 4-port (IP-H104)





- 1-port ( IP-D101 )
- 2-port (IP-D102)
  - 4-port (IP-D104)

# **Package Content**

Models	Package items
IP-C101	USB-C 1-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-C102	USB-C 2-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-C104	USB-C 4-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-H101	HDMI 1-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-H102	HDMI 2-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-H104	HDMI 4-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-S101	VGA 1-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-S102	VGA 2-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-S104	VGA 4-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-D101	DVI-D 1-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-D102	DVI-D 2-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1
IP-D104	DVI-D 4-port Mini IP KVM x 1, USB-C to USB-A 6ft power cable x 1, Mounting set x 1

# < Part 3 > USB-C IP KVM



#### **Benefits**

- IP remote access to PC(s) with USB-C connection
- 1-port, 2-port, 4-port models for selection
- OS Support : Mac / Windows / Linux
- Stylish mini size chassis for limited spacing environment
- Powerful quad-core processor for high quality video & image via IP
- Enterprise level IP authentication
- User-friendly HTML-base & Java-free remote access over IP
- Support BIOS access, no need to run OS on the connected PC(s)
- Hot pluggable, no software or drivers required
- 2 x USB hub port share peripheral devices among PC(s)

# < 3.1 > Specifications

Connector	1000 BaseT Gigabit Ethernet Port ( RJ45 )
User management	1 x active user, 15-user login
Network protocol	DHCP / BOOTP / DNS
Security	TLS 1.3, AES, LDAP, Active Directory (AD), HTTP(s)
Browser	Safari, Chrome, Firefox, Edge, etc.
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Port number	1/2/4
Connector	USB-C ( Video + KB / MS )
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Video	1 x HDMI 1.4
Keyboard / Mouse	2 x USB-A
USB Hub 2.0	2 x USB-A
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Hardware compatibility	Mac / HP / IBM / Dell PC, Server and Blade Server
OS support	Mac / Windows / Linux

EMC	FCC & CE
Safety	CE / LVD , UKCA & CB
Environment	RoHS3 & REACH

Operating temp.	0 to 55°C degree
Storage temp.	-20 to 60°C degree
Operating humidity	20 to 90%, non-condensing
Storage humidity	5 to 90%, non-condensing
Operating altitude	16,000 ft
Non-operating altitude	40,000 ft
Shock	10G acceleration ( 11ms duration )
Vibration	5~500Hz 1G RMS random vibration


Input	USB-C
Consumption	Max. 11W

Product (W x D x H)	120 x 87 x 30 (mm)	160 x 87 x 30 (mm)	220 x 87 x 44 (mm)
	4.72 x 3.43 x 1.18 (inch)	6.30 x 3.43 x 1.18 (inch)	8.66 x 3.43 x 1.73 (inch)
Packing (W x D x H)		358 x 257 x 55 mm	
		14.09 x 10.12 x 2.17 inch	
Weight Net	0.445 kg / 0.981 lb	0.578 kg / 1.274 lb	0.712 kg / 1.569 lb
Gross	0.745 kg / 1.642 lb	0.878 kg / 1.936 lb	1.212 kg / 2.672 lb
Chassis color		Dark	
Chassis materials		Steel	

# < 3.2 > Design Overview



## < 3.3 > Connection Diagram

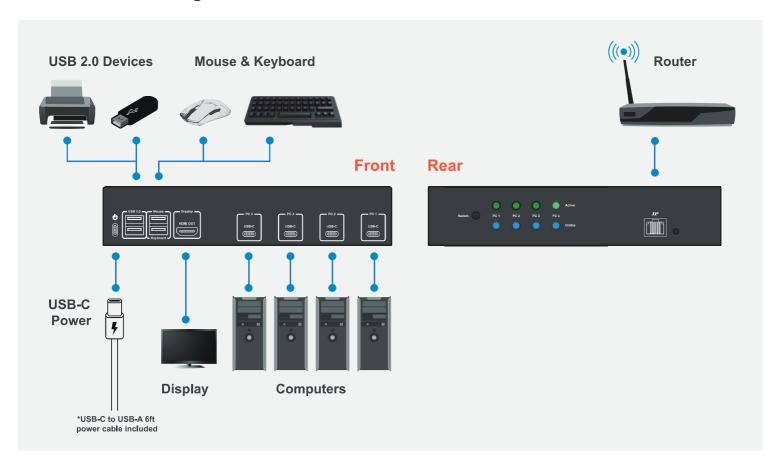

# < Part 4 > HDMI IP KVM



#### **Benefits**

- IP remote access to PC(s) with HDMI connection
- 1-port, 2-port, 4-port models for selection
- OS Support : Mac / Windows / Linux
- Stylish mini size chassis for limited spacing environment
- Powerful quad-core processor for high quality video & image via IP
- Enterprise level IP authentication
- User-friendly HTML-base & Java-free remote access over IP
- Support BIOS access, no need to run OS on the connected PC(s)
- Hot pluggable, no software or drivers required
- 2 x USB hub port share peripheral devices among PC(s)

# < 4.1 > Specifications

Connector	1000 BaseT Gigabit Ethernet Port(RJ45)
User management	1 x active user, 15-user login
Network protocol	DHCP / BOOTP / DNS
Security	TLS 1.3, AES, LDAP, Active Directory (AD), HTTP(s)
Browser	Safari, Chrome, Firefox, Edge, etc.
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Port number	1/2/4
Connector	HDMI 1.4 + USB-B ( Video + KB / MS )
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Video	1 x HDMI 1.4
Keyboard / Mouse	2 x USB-A
USB Hub 2.0	2 x USB-A
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Mac / HP / IBM / Dell PC, Server and Blade Server	
Mac / Windows / Linux	
	=
	<u>'</u>

EMC	FCC & CE	
Safety	CE / LVD , UKCA & CB	
Environment	RoHS3 & REACH	
		$\overline{}$


Operating temp.	0 to 55°C degree
Storage temp.	-20 to 60°C degree
Operating humidity	20 to 90%, non-condensing
Storage humidity	5 to 90%, non-condensing
Operating altitude	16,000 ft
Non-operating altitude	40,000 ft
Shock	10G acceleration ( 11ms duration )
Vibration	5~500Hz 1G RMS random vibration

Input	USB-C
Consumption	Max. 11W


Product (W x D x H)	160 x 87 x 30 (mm)	220 x 87 x 30 (mm)	220 x 87 x 44 (mm)
	6.30 x 3.43 x 1.18 (inch)	8.66 x 3.43 x 1.18 (inch)	8.66 x 3.43 x 1.73 (inch)
Packing (W x D x H)		358 x 257 x 55 mm	······································
		14.09 x 10.12 x 2.17 inch	
Weight Net	0.469 kg / 1.034 <b>l</b> b	0.609 kg / 1.343 lb	0.750 kg / 1.653 lb
Gross	0.769 kg / 1.695 lb	0.909 kg / 2.005 lb	1.250 kg / 2.756 lb
Chassis color		Dark	
Chassis materials		Steel	

# < 4.2 > Design Overview

#### Top

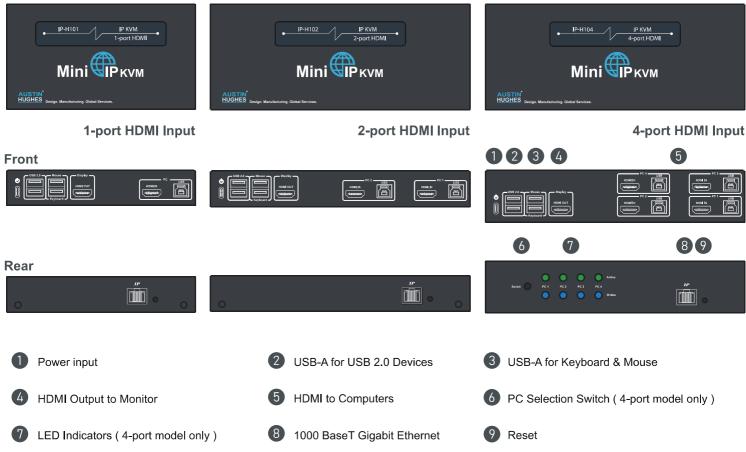

# < 4.3 > Connection Diagram

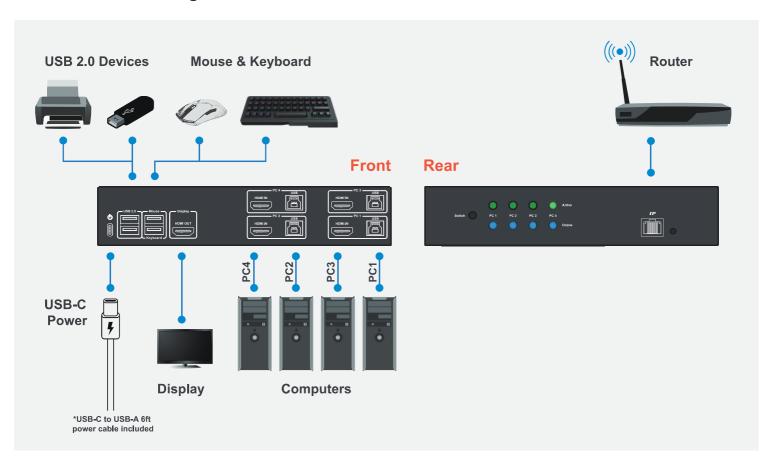

# < Part 5 > VGA IP KVM



#### **Benefits**

- IP remote access to PC(s) with VGA connection
- 1-port, 2-port, 4-port models for selection
- OS Support : Mac / Windows / Linux
- Stylish mini size chassis for limited spacing environment
- Powerful quad-core processor for high quality video & image via IP
- Enterprise level IP authentication
- User-friendly HTML-base & Java-free remote access over IP
- Support BIOS access, no need to run OS on the connected PC(s)
- Hot pluggable, no software or drivers required
- 2 x USB hub port share peripheral devices among PC(s)

# < 5.1 > Specifications

Connector	1000 BaseT Gigabit Ethernet Port(RJ45)
User management	1 x active user, 15-user login
Network protocol	DHCP / BOOTP / DNS
Security	TLS 1.3, AES, LDAP, Active Directory (AD), HTTP(s)
Browser	Safari, Chrome, Firefox, Edge, etc.
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Port number	1/2/4
Connector	VGA + USB-B ( Video + KB / MS )
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Video	1 x VGA
Keyboard / Mouse	2 x USB-A
USB Hub 2.0	2 x USB-A
Resolution ( max )	1920 x 1080 / 1920 x 1200 / 1600 x 1200

Hardware compatibility	Mac / HP / IBM / Dell PC, Server and Blade Server
OS support	Mac / Windows / Linux

EMC	FCC & CE
Safety	CE / LVD , UKCA & CB
Environment	RoHS3 & REACH

Operating temp.	0 to 55°C degree		
Storage temp.	-20 to 60°C degree		
Operating humidity	20 to 90%, non-condensing		
Storage humidity	5 to 90%, non-condensing		
Operating altitude	16,000 ft		
Non-operating altitude	40,000 ft		
Shock	10G acceleration ( 11ms duration )		
Vibration	5~500Hz 1G RMS random vibration		

Input	USB-C
Consumption	Max. 11W

Product (W x D x H)		160 x 87 x 30 (mm)	220 x 87 x 30 (mm)	220 x 87 x 44 (mm)
		6.30 x 3.43 x 1.18 (inch)	8.66 x 3.43 x 1.18 (inch)	8.66 x 3.43 x 1.73 (inch)
Packing (W x D x H)			358 x 257 x 55 mm	
			14.09 x 10.12 x 2.17 inch	
Weight	Net	0.472 kg / 1.04 lb	0.613 kg / 1.351 lb	0.754 kg / 1.662 lb
	Gross	0.772 kg / 1.702 lb	0.913 kg / 2.013 lb	1.254 kg / 2.765 lb
Chassis co	olor		Dark	
Chassis m	aterials		Steel	